





An extension unit can be fitted to your telephone. This provides additional keys which can be configured as function keys, line keys, call keys, etc.

To affix labels: push the holding strip of the unit backwards to you and lift it. Install the label under the keypad, in the housing designed for, and place the keypad back into

ALCATEL

Display and display keys

Contains several lines and pages providing information on calls and the functions accessible via the 10 keys associated with the words on the screen.



Transfer icon: pressing the key next to this icon allows you to program or change the transfer function.



Headset connected. Appointment programmed.



Silent mode activated.



Telephone locked.

Display keys: pressing a display key activates the function shown associated with it on

Navigation



OK key: used to validate your choices and options while programming or configuring.



Left-right navigator: used to move from one page to another.

 


Up-down navigator: used to scroll through the content of a page.



Back/Exit key: to return to previous menu (short press) or return to first screen (long press); during a conversation, provides access to welcome screens (Menu, Info. ...) and to return to the conversation icon screens.

■ Welcome screens



Menu page: contains all functions and applications accessible via the keys associated with the words on the

 
Perso page: contains call line keys and programmable

Info page: contains information on the telephone and the status of its functions: name, telephone number, number of messages, activation of transfer function, appointment reminder, etc.


Call display



Incoming call.




Call in progress or outgoing call.

 



Call on hold.

 

If you get two calls at the same time, you can Left-right navigator: used to check calls. switch from one call to the other by pressing the OK key: used to answer the call checked. display key associated with each call

■ Function keys and programmable keys





if the key flashes, a new voice message or a new text message has been received.

(A) "Redial" key: call back the last number dialled.

> Programmable key (FI and F2 keys): lit when the function associated with the key is activated.

Customize your terminal

The customization functions of the telephone are accessed from the **Menu** page.

Modifying your personal code

English







reach the "menu' page





Lock / unlock your telephone







reach the "menu' page

depending the displayed informations, enter your password or confirm



Adjusting the audio functions

Menu







reach the "menu' page



djust ringing (melody, volume, mode,...) by following instructions displayed on the

Adjusting screen brightness (Alcatel 4038)









reach the "menu' page









increase or decrease the contrast

adjust the contrast by consecutive presses

Using your telephone

Identify the terminal you are on

The number of your telephone is displayed on the "Info" page.



Access the Info page using the navigator.

Making a call















lift the receiver hands free

programmed line key

dial directly the number for your call



To make an external call, dial the outside line access code before dialling your correspondent's number.

Receiving a call



lift the

receiver













press the key next to the "incoming call" icon

Redialling





hands free

last number redial

Make a call-back request to a busy number







hang up

Voice message service

 
Consulting your voice mailbox

If the key flashes orange, a new voice message or new text message has been received.









press the key next to "consult voice or text message"



Divert your calls to another number

Divert your calls to another number

press the key associated

with the type of diversion

required (immediate, if

busy, if no reply etc.)











press the ok key if programming is not automatically recorded

Diverting calls to your voice mailbox









press the ok key if programming is not automatically recorded

mailbox" When you return, cancel all diversions

with "divert to voice







if necessary, confirm cancellation of the diversion

press the key next to "cancel or deactivate the diversion"

Directory

Using call by name



enter the first

letters of the









make the call









select the name from the

displayed list



select the name from the displayed list

make the call

Persol

Perso

Program your call keys



access the

using the

navigator

perso page









press a call key or a programmable key (fl or f2), either directly or via the key

Make calls via your programmed call keys



find the correspondent you want to call from the programmed call keys



call the chosen correspondent

During a conversation

Sending DTMF signals

During a conversation you sometimes have to send DTMF signals, such as with a voice server, an automated attendant or a remotely consulted answering machine. The function is automatically cancelled when you hang up.









during a conversation













dial



dial directly the number for your call

Transferring a call

During a conversation, to transfer the call to another number:





number to be called



Three-way conference

During a conversation, a second call is on hold.











three-way conference

cancel conference and return to first correspondent

hang up on all correspondent

Guarantee and clauses

This document describes the services available on telephones Alcatel 4038-4039-4068 connected to an Alcatel OmniPCX Office or Alcatel OmniPCX Enterprise system. For more information, please consult the User Guide for your 4038-4068 (IP set) or 4039 (digital set). Contact your installer. Warning: never place your telephone in contact with water. To clean your telephone, you may however use a damp soft cloth. Never use solvents (trichlorethylene, acetone, etc.) which may damage the plastic parts of your telephone. Never spray it with cleaning products. Earpiece may retain magnetic objects.

The wording is not contractual and may be subject to change. Some functions of your telephone are controlled by a software key and the configuration of the unit.

EC: We, Alcatel Business Systems, hereby declare that we assume the Alcatel 4038, 4039 or 4068 product to be compliant with the essential requirements of Directive 1999/5/CE of the European Parliament and Council. A copy of the original of this declaration of compliance can be obtained from your installer.

Alcatel 4068

This apparatus makes use of a frequency spectrum, which use is not harmonized throughout the countries of the EC. The frequency spectrum may be shared with other applications and its operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device is designed and manufactured not to exceed the emission limits for exposure to radio frequency energy in SAR (Specific Absorption Rate) set by the concerned countries (Federal Communications Commission for the United-States).

Alcatel Business Systems, in keeping with its policy of constant product improvement for the customer, reserves the right to modify product specifications without prior notice. Copyright © Alcatel Business Systems. 2004. All rights reserved.